

MonoScan[®]

Quick Reference Guide


MonoScan must be installed, connected and operated according to the instructions in the User's Manual.

If installed incorrectly or used for applications for which it is not intended application-related dangers may arise.

Only qualified personnel are authorized to install and operate MonoScan.

Do not open the MonoScan unit.
If the unit is opened the warranty is null and void.

Modifications and repairs to MonoScan are permissible only when the manufacturer expressly approves them.

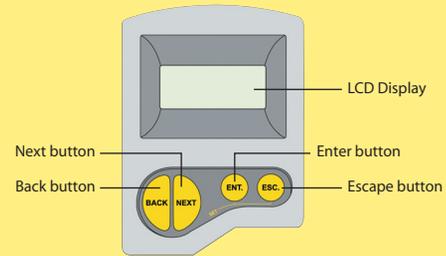

Accessing the functions menu (when pressed simultaneously with ESC).
Selecting functions.
Progressing to the next step of a function.
Moving from left to right between displayed digits. Saving changes to data.



Accessing the functions menu (when pressed simultaneously with ENT).
Exiting the functions menu to restore the distance reading.




Moving from right to left between displayed digits.
Exiting a function without saving changes.
Clearing error messages.

Scrolling through the functions menu.
Scrolling through available data values in functions.
NEXT button only: Recording interfering signals.

MODEL 0 S,L,O S,L,O S,L,O S,L,O S,L,O L,O S,L,O S,L,O S,L,O

PR.

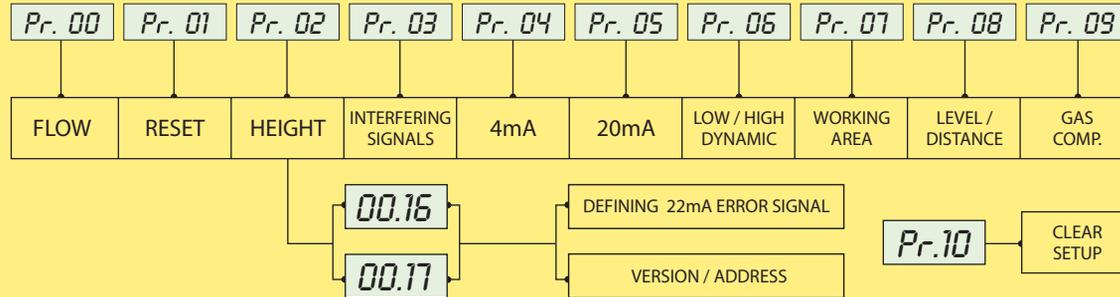

PRECAUTIONS

- Ensure that MonoScan is mounted in an area that meets the stated technical specifications.
- Ensure that high-voltage sources or cables are at least 1 m away from the sensor and its cable.
- Use round cables with a minimum diameter of 6 - 7 mm to ensure that the unit remains sealed, IP 65 / IP 67.
- Ensure that cables are routed correctly and tightened along walls / pipes.
- Ensure you are connecting the MonoScan to a proper Power Supply.
- When installing MonoScan, ensure that it is:
- Mounted above the dead-zone area
 - Positioned at least 0.5 m (1.64 ft) away from the tank walls
 - Perpendicular to the surface of the target
 - Placed as far as possible from noisy areas, such as a filling inlet

Revision: 1.3

Software Version: 1.069 to 4.08 English

Catalog Number: 680002C

Date: June, 2003

ERRORS

- | | |
|----------------|--|
| 8.8.8.8 | Appears for several seconds after restarting the unit. |
| ECl1 | Noise in area. |
| E555 | Faulty power supply. |
| 5544 | Sensor disconnected. |
| 8818 | Any combination of three 8s and one 1: indicates an electrical shortage. |
- Coulton Instrumentation Ltd**
17 Somerford Business Park
Christchurch, Dorset
BH23 3RU
Tel: +44 (0) 1202 480303
Fax: +44 (0) 1202 480808
Email Sales@coulton.com